



reverb-delay

- 1. Input "mono-jack"
- 2. Output "stereo or mono-jack", or you can use standard reducing plug as shown below.
- **3.** Power supply DC 12V/100mA. Attention! you've got to connect Power supply delivered with you effect. [max power consumption 130mA]
- 4. delay repeat (feedback) knob (0% 90%)
- 5. DELAY time range knob (50 1000 ms). 60bpm-1200bpm
- **6.** REVERB time range knob (0.5 10 s.)
- 7. REVERB & DELAY balance knob
- 8. WET/DRY MIX knob
- **9.** Footswitch if it's turned off true-bypass is active on mono channel and in stereo mode right channel is turned on "active bypass mode".
- 10. Power led.