


# Passive Tone Control Module

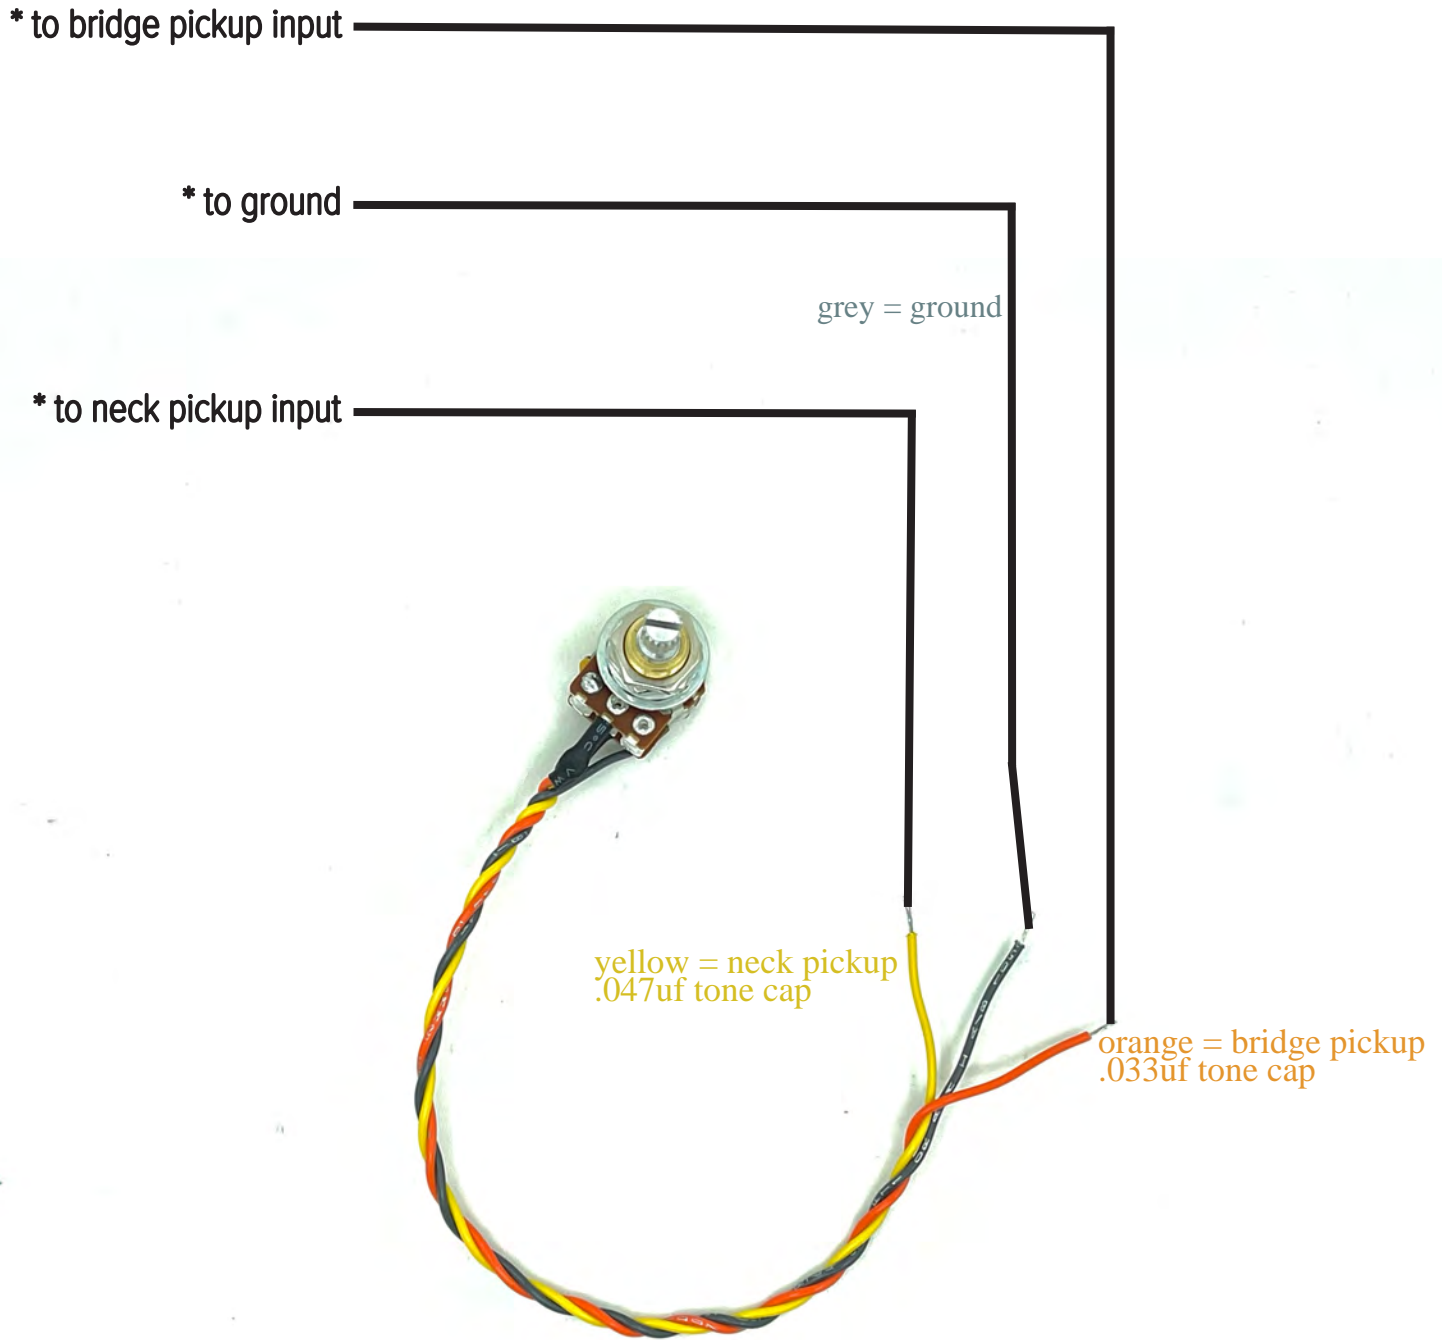

\* Please see the wiring diagram for the particular type of preamp you have.

For example, if you are adding the passive tone control module to a preamp like a John East, ACG, or Lusithand, these wires will just go into the same screw terminals as the pickups.  
With other preamps where the pickup wires soldered directly to blend or volume pots, these wires will be soldered to the same lug on pot along with the corresponding neck or bridge pickup.

The ground wire can be connected to the most convenient ground location. On a John East preamp. one of the ground screw terminals for one of the pickups will do.  
Each pickup will have a ground screw terminal, this ground wire can go to one or the other.